

Adamson Systems Engineering Blueprint AV™ Installation Guide



Adamson Systems Engineering


Using the Service Section

With the launch of Adamson Systems' new website, we have revamped the service section, which is the portal through which the end user can file warranty claims. This document will detail the process taken to file a claim.

Installing Blueprint AV™

Downloading the Software


1. Navigate to the Adamson Systems website at <http://www.adamsonsystems.com/>
2. Go to the Blueprint AV™ Login page, accessible through the 'Account Access' button at the bottom right-hand side of any page on the Adamson website. Alternately, the login can be accessed through the 'Blueprint AV™' login in the 'Support' drop down menu.

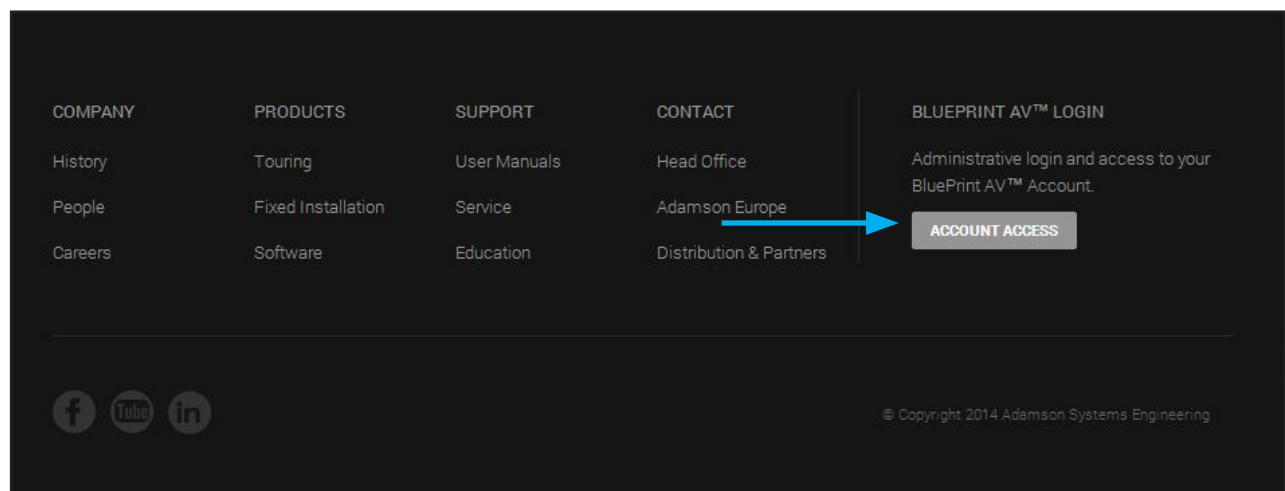

Installing Blueprint AV™

Downloading the Software

3. Enter Email Address and Password, as provided to you by your Adamson Technical Representative.

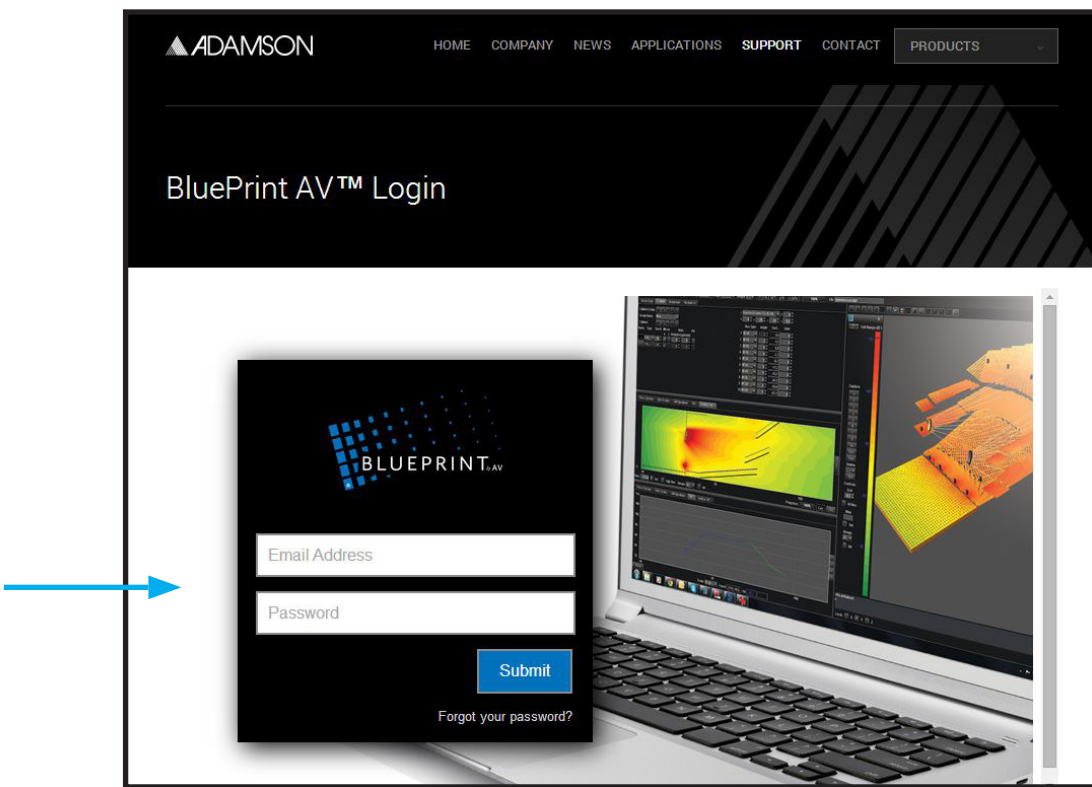

Installing Blueprint AV™

Downloading the Software

4. From the 'Customer Account' page, you will see the account holder's details (which can be altered), download links for the latest version of the software for both Windows and Mac, as well as pertinent license information. All of the users licensed on the main account will be listed on this page.

The screenshot shows the 'Customer Account' page of the Adamson website. The page has a dark header with the Adamson logo and navigation links: HOME, COMPANY, NEWS, APPLICATIONS, SUPPORT, CONTACT, and PRODUCTS. Below the header, the page title 'BluePrint AV™ Login' is displayed. The main content area is divided into two sections: 'Customer Account' and 'Downloads'.

Annotations with blue arrows point to specific elements:

- License holder details can be changed:** Points to the 'FirstName LastName Company' text in the 'Customer Account' section.
- Download links:** Points to the list of download links under the 'Downloads' section:
 - [Blueprint Win V0.3.5.7](#)
 - [Blueprint Mac V0.3.5.7](#)
- Serial number required to activate software:** Points to the 'Serial Number' column in the license table.

The license table contains the following data:

Date	Reference
2014-04-22	


Serial Number	Allowed Activation	Active License
31160-10007-	13	12

Serial	Product	Request	License	Computer	Activation	IP Address	First


Installing Blueprint AV™

PC Installation

1. Launch the downloaded installer file. If you have a previous version of Blueprint AV™ installed on your computer, you will be prompted to uninstall. Do so.

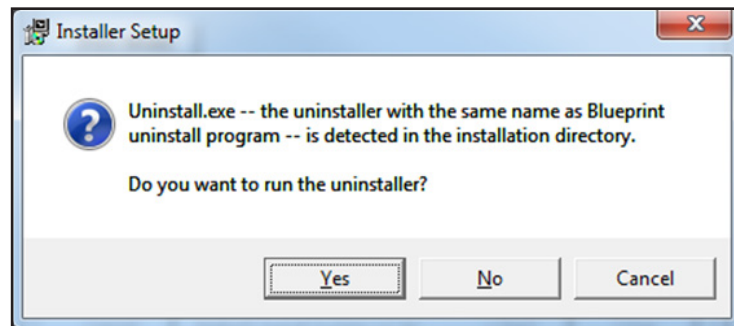

2. Upon launching the program for the first time, you will be asked to enter a serial number and identifying data. Enter the serial number listed on the Blueprint AV™ Customer Account page and your identifying data. Make sure you have an active internet connection before clicking the 'Activate Now' button. When other users require a license, make sure you have active licenses available, and give them the same serial number to activate their copy of Blueprint AV™.

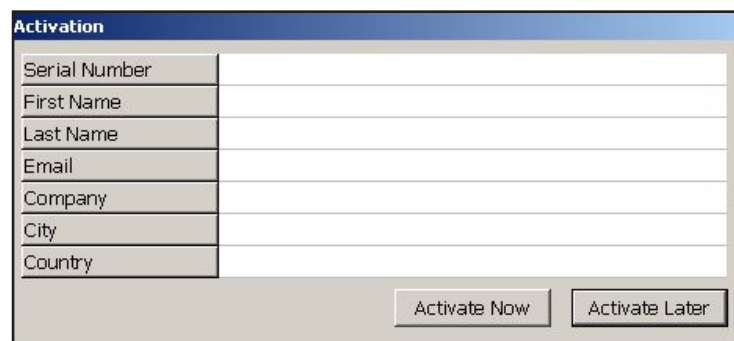


Activation	
Serial Number	
First Name	
Last Name	
Email	
Company	
City	
Country	
<div>Activate Now Activate Later</div>	

**Note: After clicking 'Activate Now' please be patient while the license is activated.*


Installing Blueprint AV™

PC Installation

3. Once you successfully activate Blueprint AV™, the program will launch and you will be greeted with a confirmation pop-up.

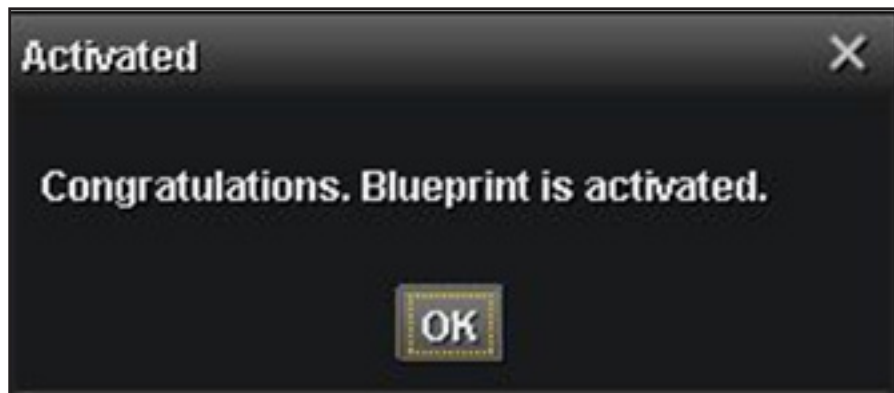

4. If you wish to release your license so it can be used on another computer, go to Help --> About --> License Option in the Blueprint AV™ software and click the 'OK' button to release the license. Make sure you have an active internet connection when doing so.

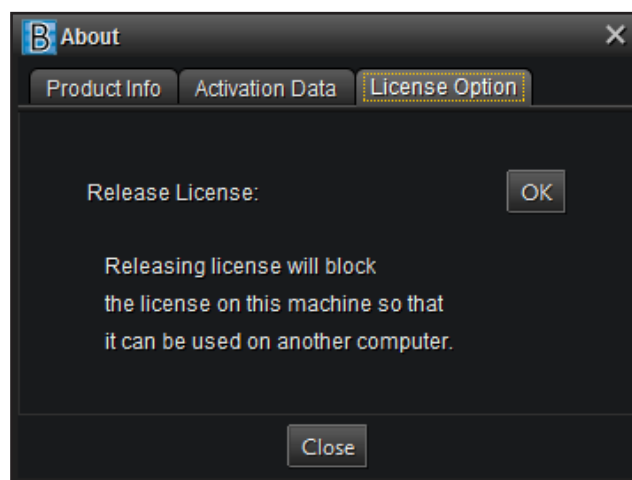


5. To re-activate the license, simply start the Blueprint AV™ software and you will be prompted to re-activate.

Installing Blueprint AV™

Mac Installation


1. Launch the downloaded zip file, which will extract to a package file. Launch the package file and you will be prompted to enter a serial number. Enter the serial number listed on the Blueprint AV™ Customer Account page and your identifying data. Make sure you have an active internet connection before clicking the 'Activate Now' button. When other users require a license, make sure you have active licenses available, and give them the same serial number to activate their copy of Blueprint AV™

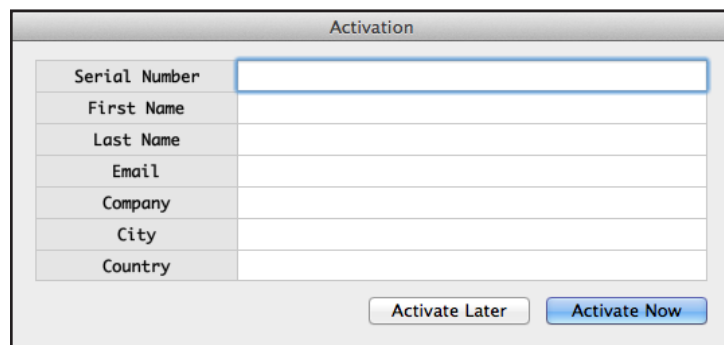

The screenshot shows a Mac OS-style window titled "Activation". It contains a form with the following fields: Serial Number, First Name, Last Name, Email, Company, City, and Country. Each field has a corresponding text input box. At the bottom right of the window, there are two buttons: "Activate Later" and "Activate Now". The "Activate Now" button is highlighted in blue.

**Note: After clicking 'Activate Now' please be patient while the license is activated.*


2. Once you successfully activate Blueprint AV™, the program will launch and you will be greeted with a confirmation pop-up.

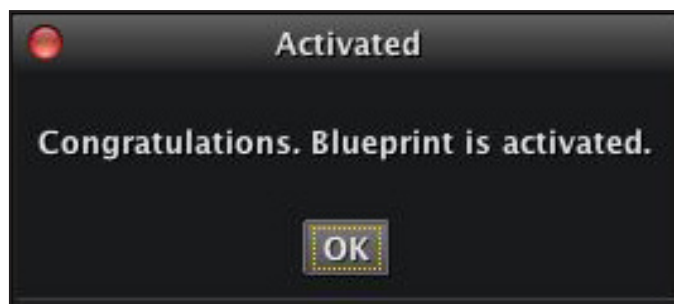


Installing Blueprint AV™

Mac Installation

3. Once you successfully activate Blueprint AV™, the program will launch and you will be greeted with a confirmation pop-up.

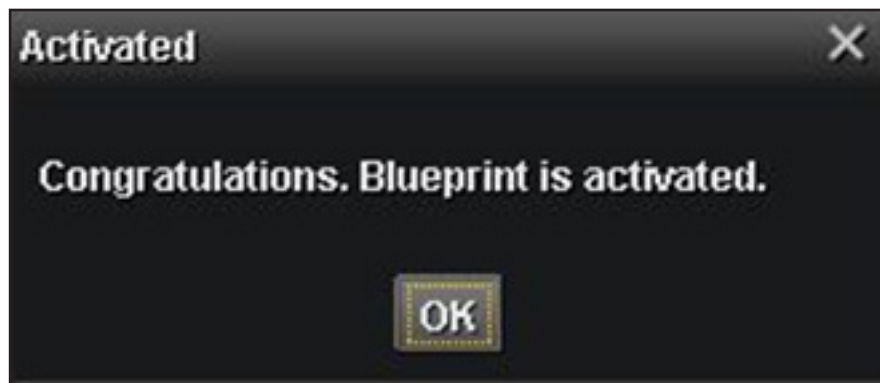

4. If you wish to release your license so it can be used on another computer, go to Help --> About --> License Option in the Blueprint AV™ software and click the 'OK' button to release the license. Make sure you have an active internet connection when doing so.

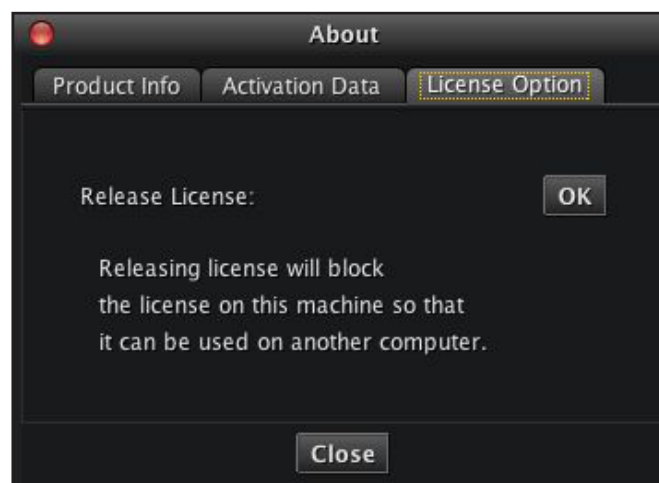

5. To re-activate the license, simply start the Blueprint AV™ software and you will be prompted to re-activate.